


**INSTALLATION
INFORMATION**


Beckett CAD Cell Replacement Kit
Part Nos. 7006U / 7135U / 7316U

Detector Assembly Part Number	Bracket Part Number	Wire Assembly Part Number	CAD Cell Base	CAD Cell Eye Assembly
7006U	31381	595801	3138001	596101
7135U		595802		
7316U*	31681	595801		

*AFII CAD Cell only

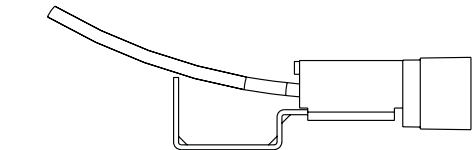

Bracket # 31681 for AFII Burners only



Bracket # 31381 for all other burners

Installation Instructions

1. The installer must be a trained, experienced service technician.
2. Reference the burner manual supplied with your appliance and adhere to all Dangers, Warnings, Cautions and Notes.
3. Remove power to the burner.
4. Flip open the igniter and remove the cad cell eye from the bottom of the igniter plate.
5. Remove the control from the junction box and locate the cad cell wires. Disconnect the wires and remove the cad cell assembly.
6. Install the replacement cad cell by reversing the above steps.
7. Refer to the manual supplied with the burner to check cad cell resistance and burner operation.

R.W. BECKETT CORPORATION

P.O. Box 1289
Elyria, Ohio 44036
1-800-645-2876

Printed in the U.S.A. 8/15/08
RWB 61709 R01

R.W. BECKETT CANADA, LTD


430 Laird, Unit 3
Guelph, Ontario N1G 3X7
1-800-665-6972

**INSTALLATION
INFORMATION**


Beckett CAD Cell Replacement Kit
Part Nos. 7006U / 7135U / 7316U

Detector Assembly Part Number	Bracket Part Number	Wire Assembly Part Number	CAD Cell Base	CAD Cell Eye Assembly
7006U	31381	595801	3138001	596101
7135U		595802		
7316U*	31681	595801		

*AFII CAD Cell only

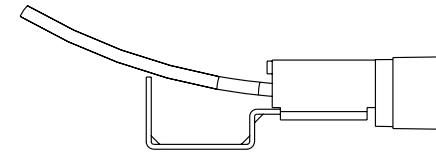

Bracket # 31681 for AFII Burners only



Bracket # 31381 for all other burners

Installation Instructions

1. The installer must be a trained, experienced service technician.
2. Reference the burner manual supplied with your appliance and adhere to all Dangers, Warnings, Cautions and Notes.
3. Remove power to the burner.
4. Flip open the igniter and remove the cad cell eye from the bottom of the igniter plate.
5. Remove the control from the junction box and locate the cad cell wires. Disconnect the wires and remove the cad cell assembly.
6. Install the replacement cad cell by reversing the above steps.
7. Refer to the manual supplied with the burner to check cad cell resistance and burner operation.

R.W. BECKETT CORPORATION

P.O. Box 1289
Elyria, Ohio 44036
1-800-645-2876

Printed in the U.S.A. 8/15/08
RWB 61709 R01

R.W. BECKETT CANADA, LTD

430 Laird, Unit 3
Guelph, Ontario N1G 3X7
1-800-665-6972