



**THIS QUICK TUTORIAL
WILL GUIDE YOU
THROUGH THE STEPS
ON PROGRAMMING
THE CIRCULATOR
SETTINGS ON THE
AQUASMART CONTROL**

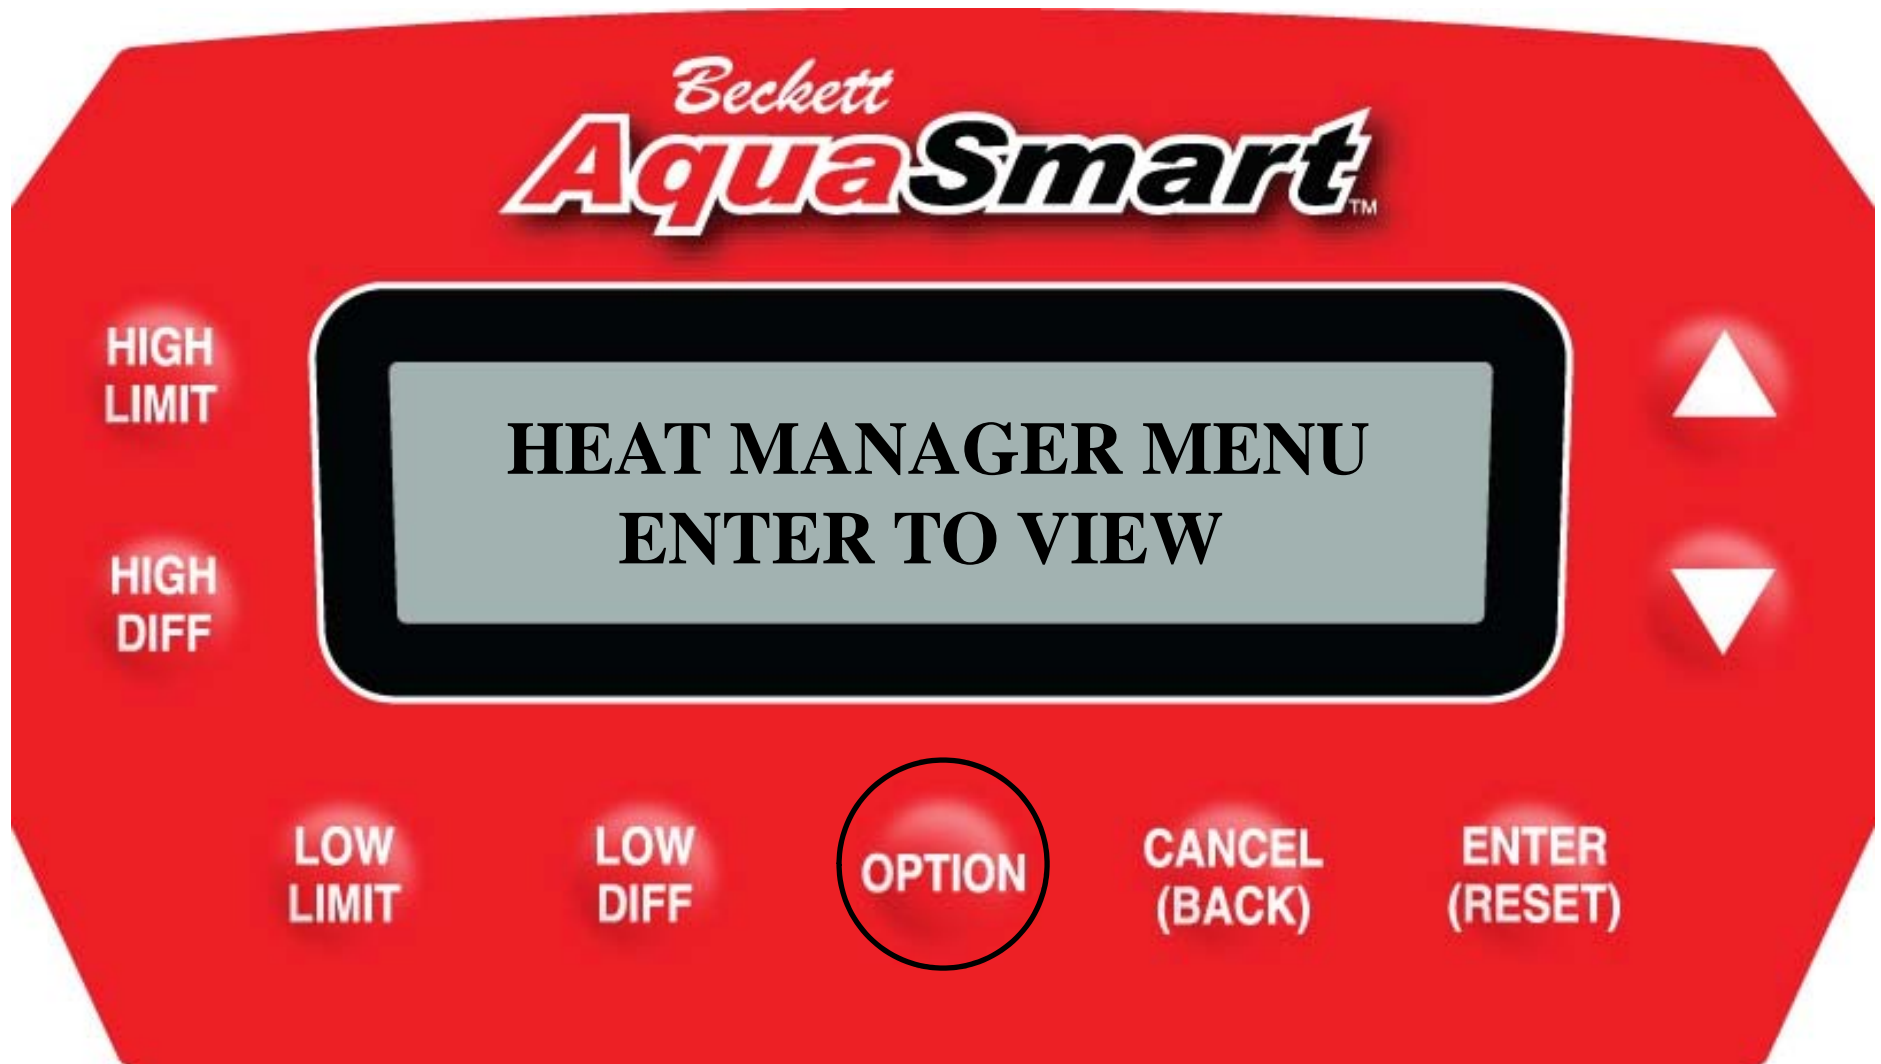

Press the option key, the following screen is displayed

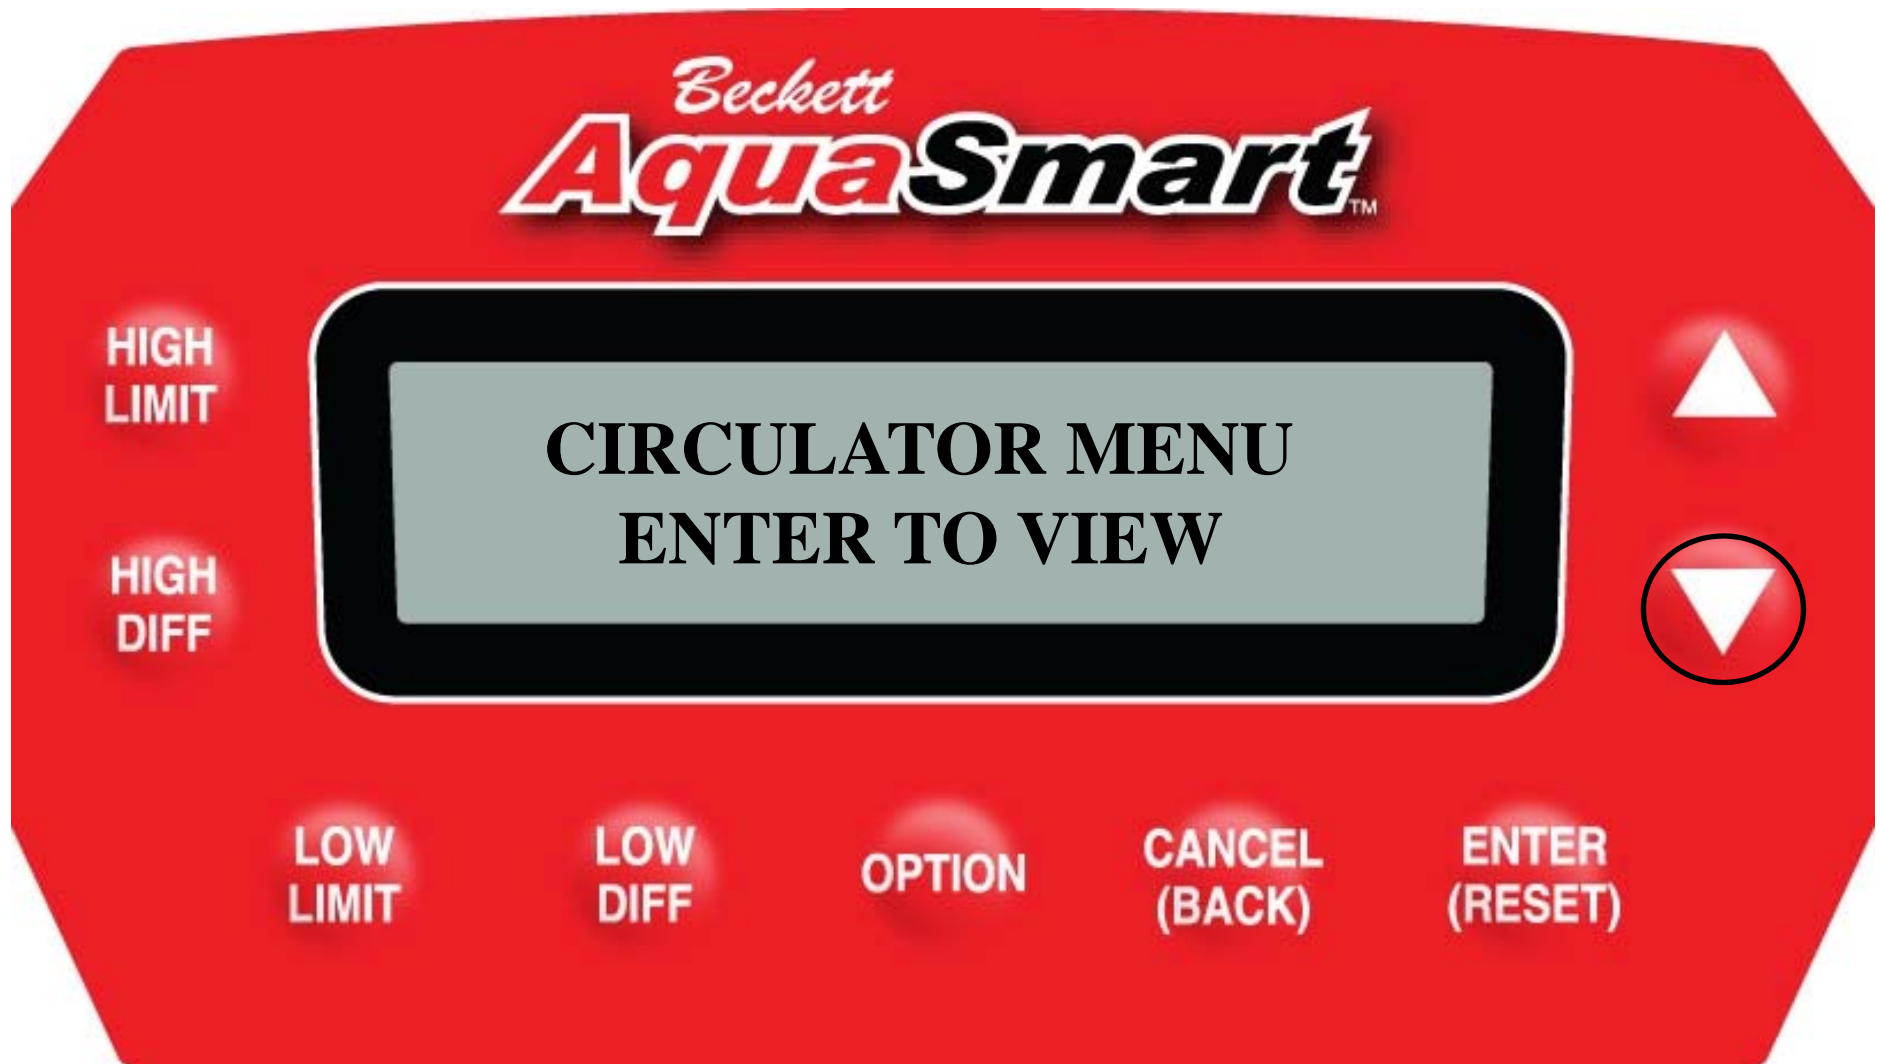

Press the down arrow key twice to view the circulator menu

Beckett
AquaSmart™

HIGH
LIMIT

HIGH
DIFF

**CIRCULATOR MENU
ENTER TO VIEW**

LOW
LIMIT

LOW
DIFF

OPTION

CANCEL
(BACK)

ENTER
(RESET)

Press ENTER

Beckett
AquaSmart™

HIGH
LIMIT

HIGH
DIFF

DELAY OFF: 0:00
ENTER TO CHANGE

LOW
LIMIT


LOW
DIFF

OPTION

CANCEL
(BACK)

ENTER
(RESET)

Press ENTER

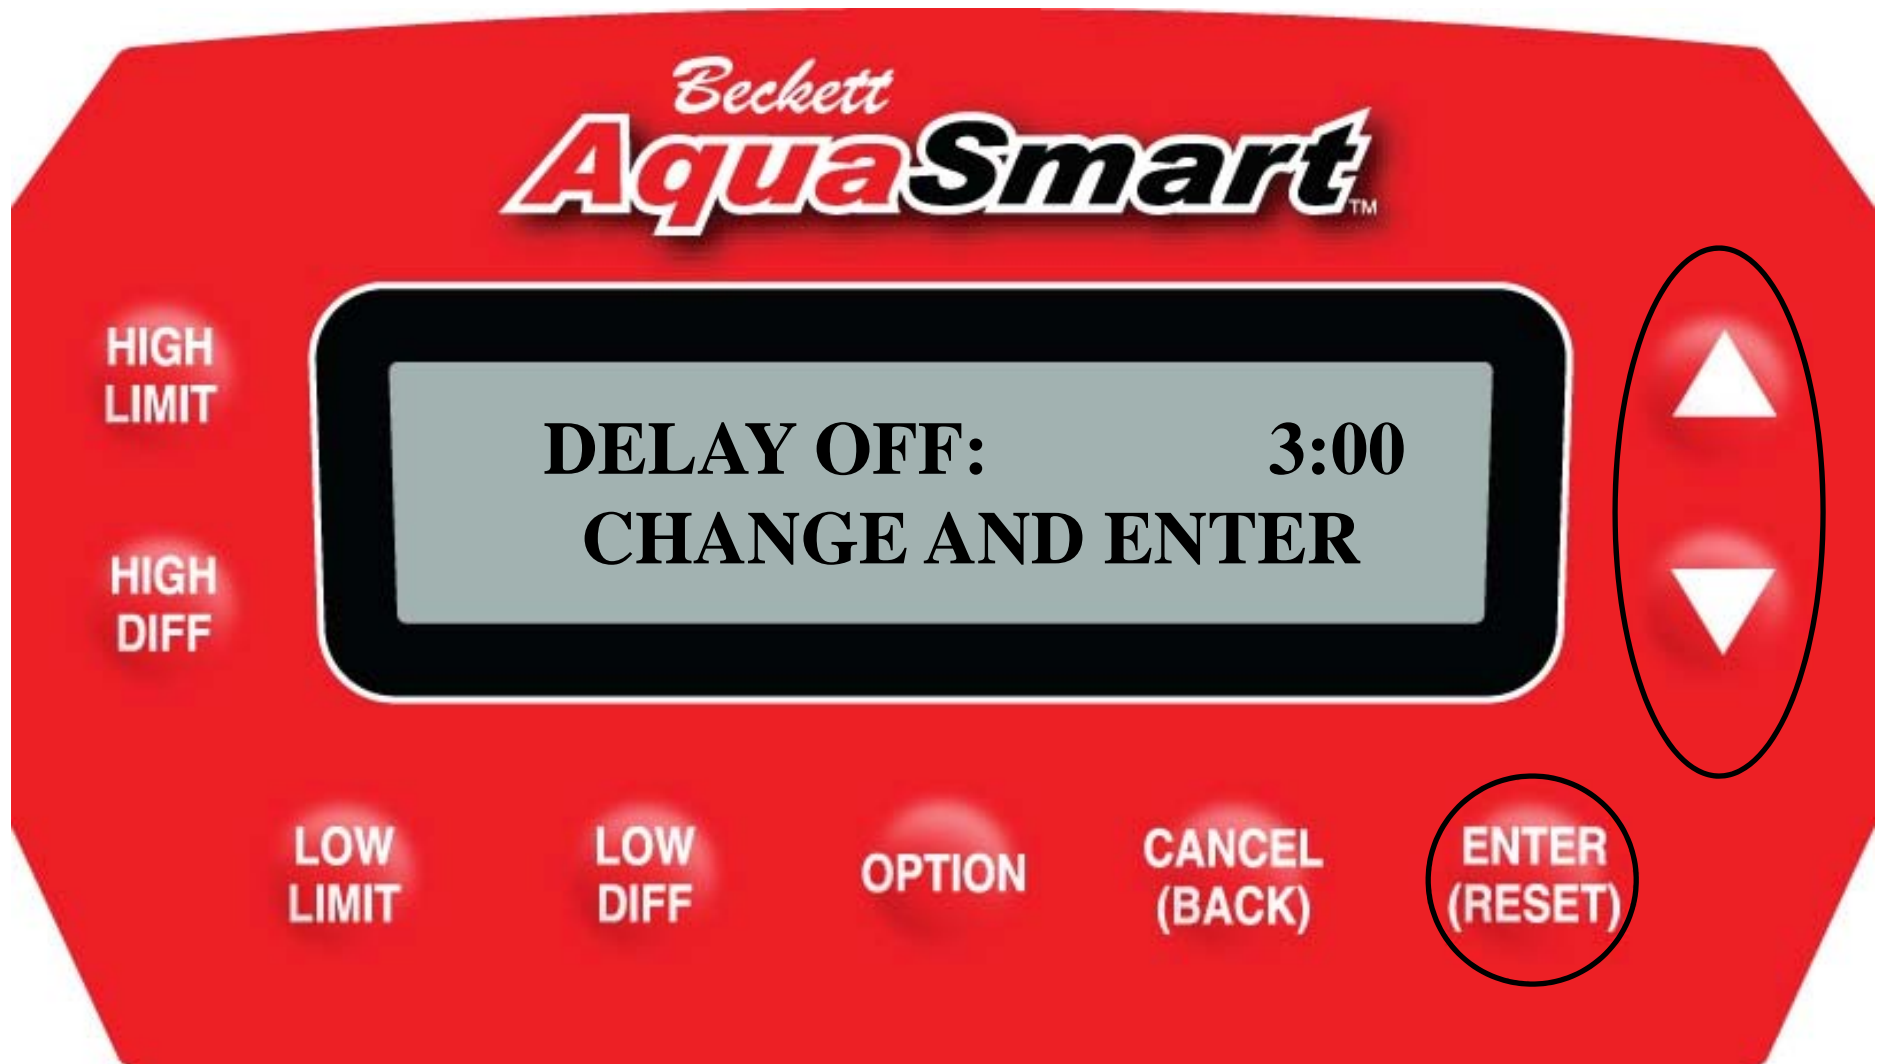

USING THE UP AND DOWN ARROWS, CHANGE THE CIRCULATOR DELAY OFF TIME AND PRESS ENTER

Beckett
AquaSmart™

HIGH
LIMIT

HIGH
DIFF

DELAY OFF: 3:00
ENTER OR CANCEL

LOW
LIMIT

LOW
DIFF

OPTION

CANCEL
(BACK)

ENTER
(RESET)

Press ENTER



The correct delay time is now displayed. Press the down arrow key to set the circulator delay on time

Beckett
AquaSmart™

HIGH
LIMIT

HIGH
DIFF

DELAY ON: 0:00
ENTER TO CHANGE

LOW
LIMIT

LOW
DIFF

OPTION

CANCEL
(BACK)

ENTER
(RESET)

Press **ENTER**



USING THE UP AND DOWN ARROWS, CHANGE THE CIRCULATOR DELAY ON TIME AND PRESS ENTER

Beckett
AquaSmart™

HIGH
LIMIT

HIGH
DIFF

DELAY ON: 4:15
ENTER OR CANCEL

LOW
LIMIT


LOW
DIFF

OPTION


CANCEL
(BACK)

ENTER
(RESET)

Press **ENTER**

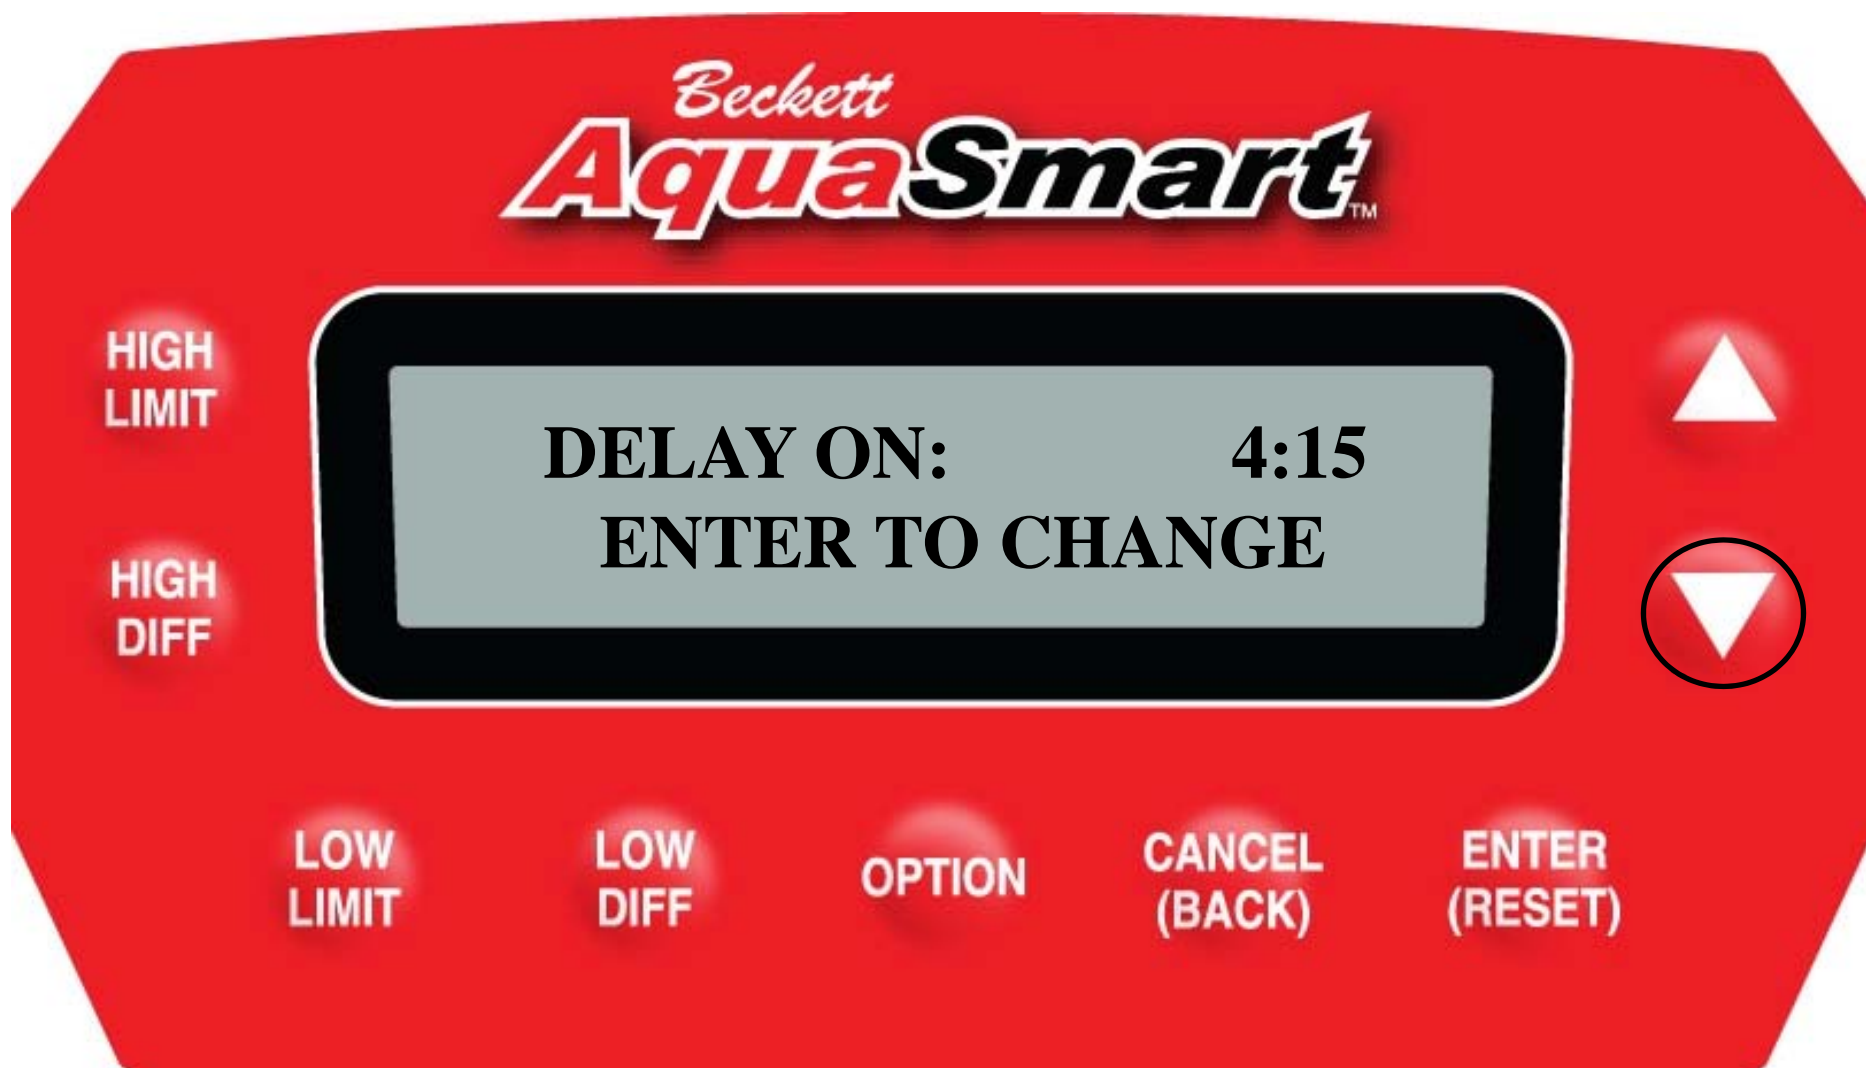

The correct delay time is now displayed. Press the down arrow key to set the circulator call for heat source

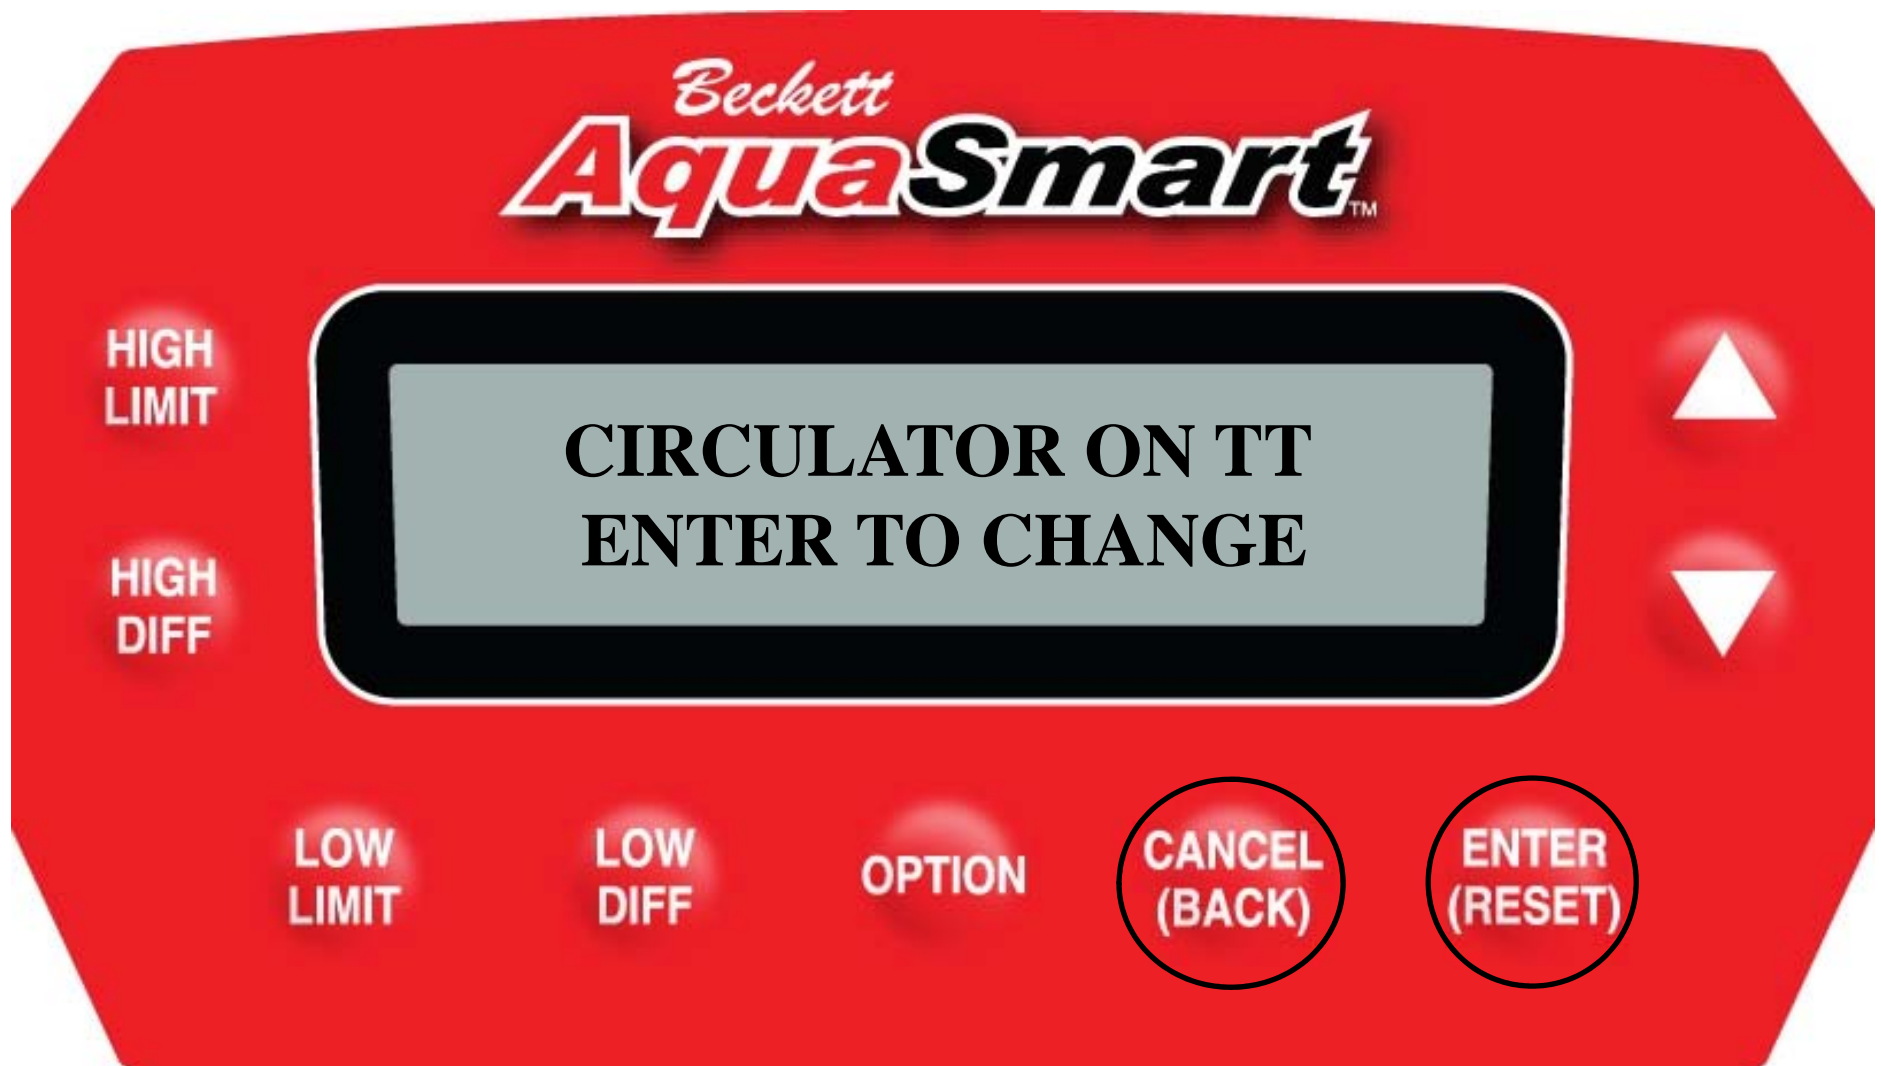

Press ENTER to toggle the circulator source between ON TT, ON ZR or ON BOTH
When you have the correct circulator setting, Press the cancel back key to save and exit